PROSCAN

USER'S MANUAL

PLT4311-PL

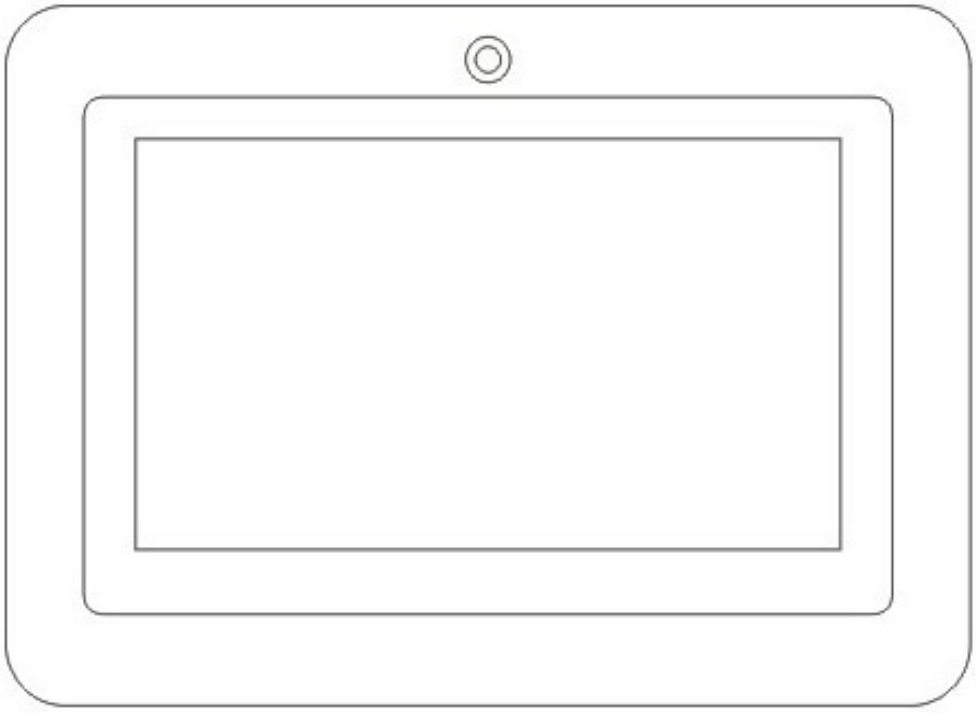

Proscan is a registered trademark of TECHNICOLOR USA INC. Used under license.

Contents

Safety Notices
Getting ready to use the device
- What's inside box
- Product Appearance
- Control buttons and connections
- Technical Specifications

Quick Guide
- Power on / Power off
- Standby and Lock screen
- The desktop status bar and shortcut menu and the definition of the icons
- Orientation Sensor Setting
- Battery management and recharging
- WIFI network settings
- Mobile network settings
- To install an APK file
- To uninstall an APK file
- Camera
- Voice recording
- Use the device a multi media player
    - Music playback
    - Video playback
    - Photo browsing
- ES File Explorer
- Set OSD Language
- Set Keyboard
- Set Date and time
- About the Device
- Trouble Shootings

Safety notices

1) Keep this device away from strong magnetic field to avoid any damages

2) Do not rub this device with any hard objects and never clean this device with any chemicals or detergents or acids or it could cause damages on surfaces.

3) Humidity or liquid may enter this device and causes permanent damages to the hardware inside. Do not place this device in any humid environment or under the rain.

4) It is recommended that volume level of the earphones should be adjusted to an appropriate level to avoid damages to your hearings due to high volume.

5) Do not cut off the power abruptly during software update, software download, or during this device is under any kind of operation or it may cause data lost and system error.

6) Over-voltage, power cable strain, bending or squeezing by heavy objects must be avoided to prevent this device from overheating or fire disaster.

7) To eliminate the risk of electric shock, do not connect the power plug with wet hands.

8) Some movies, music and pictures are under protections of copyrights, any unauthorized usages are deemed as infringements to the laws of copyrights.

9) The performance of the WIFI reception of this device could be influenced by the wireless equipments and networks in the surrounding areas.

10) Any wireless equipment will influence the flight of an airplane, please consult the airline company if you want to use this device on the airplane.

11) Do not use this device anywhere near any blasting operations.

12) Only qualified maintenance personnel is allowed to dismantle this device.

13) Please comply with any related restrictions and rules when using this device.

14) Only use this device with its original accessories and battery.

15) Do not use any incompatible accessories on this device.

16) This device is not waterproof, please keep it dry all the time.

17) For the sake of data safety, please back up the important data anytime on a timely basis.

18) When connecting this device with other equipments, please follow instructions on this user's manual.

19) Never connect this device with any incompatible equipment.

20) Please consult the after-sales service in your area for any technical problems.

Getting ready to use the device

What's inside box

Components	Quantity
Tablet PC	1
Power Charger	1
Earphone	1
USB Cable	1
Quick Start Guide	2
User Manual	2

Product Appearance

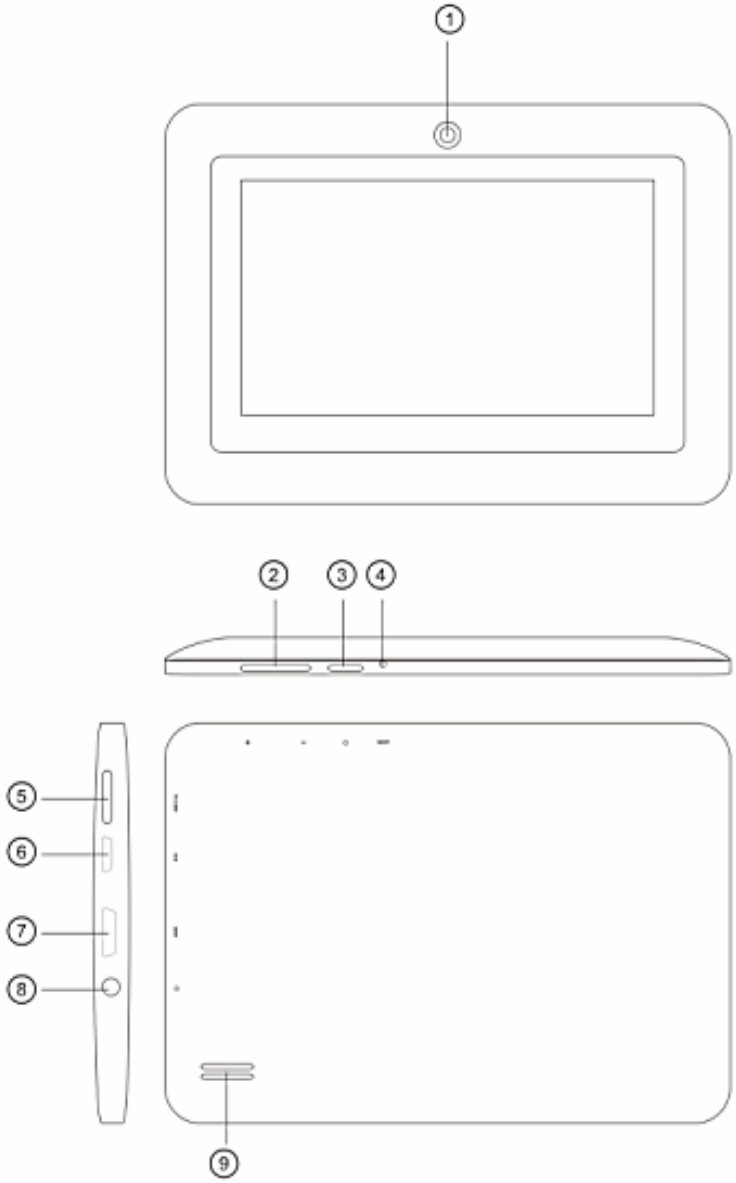

Control buttons and connections

View	Button	Function
Front	①	Front camera
Side	②	Volume + / -
	③	Power on/off
	④	Reset
	⑤	Micro SD Card slot
	⑥	USB slot
	⑦	HDMI slot
	⑨	Earphone jack
	⑩ 	Speaker

Technical Specifications

LCD Display	Size	4.3” TFT capacitive multi Tap panel LCD display
	Resolution	480*272
Operation System	Android 4.0	
PC interface	High speed USB2.0 HOST for external U-disk, Mouse, etc	
Built-in Flash	Flash Memory：4GB	
Built-in RAM	512M DDRIII	
Capacity Expansion	Support Micro SD Card up to 32GB (not included)	
Power Supply	Built-in 3.7V Lithium rechargeable battery Charger: Input: AC100V~240V, Output: USB 5V/1.5A	
Music Function	Format	WMA、MP3、OGG、APE、FLAC、AAC、WAV
	Headset max. output	（L）5mW＋（R）5mW（32Ohm）
	Bit rate	8Kbps ~ 320Kbps
	WMA、WMV、Bit rate supported	5Kbps ~ 320 Kbps
	Frequency response	20Hz to 20KHz
	SN ratio	90dB
	Distortion	＜0.05%
Video Function	Play format	MKV、AVI、RM、RMVB、MP4、MOV、VOB、DAT、FLV、3GP, etc
	Max. resolution supported	2160p
	Ratio	16：9wide screen for optional

Photo browse	JPG、JPEG、BMP、GIF supported	
E-book Function	Format Supported	TXT、LRC、PDF、Html、Htm、EPUB, etc (Install .APK via third party)
	Max. capacity	20M
Recording function	Format supported	AMR
WI-FI Function	Spec	802.11b/g/n
	Transmission rate	Max150Mbps
	Transmission Distance	Max100m
	Work Frequency	2.4GHz
Auto Screen Rotation	Selectable from Setting menu	
Loudspeaker	Built-in 1W@8ohm	
Working temperature	-10 ~ 45℃	
OSD Languages	Default language: Spanish Other options: Catala, Cestina, Dansk, Deutsch, English, Romanian, Espanol, Francais, Hebrew, Hrvatski, Indonesian, Italiano, Latviesu, Leituviu, Magyar, Nederlands, Norsk Bokmal, Polski, Portugues, Romana, Romansh, Slovencina, Suomi, Svenska, Tagalog, Tieng Viet, Turkce, Russian, Korean, Chinese, Japanese,	
Operation systems supported	Compatible with Windows 98 se / 2000 / XP / Vista / 7, Mac 9.1 or above, Linux 2.4	

Quick Guide

Power on / Power off

Long press button for 3 seconds to power on the device.
It will take about a minute and half to boot the system.
Unlock the screen by sliding to the up.

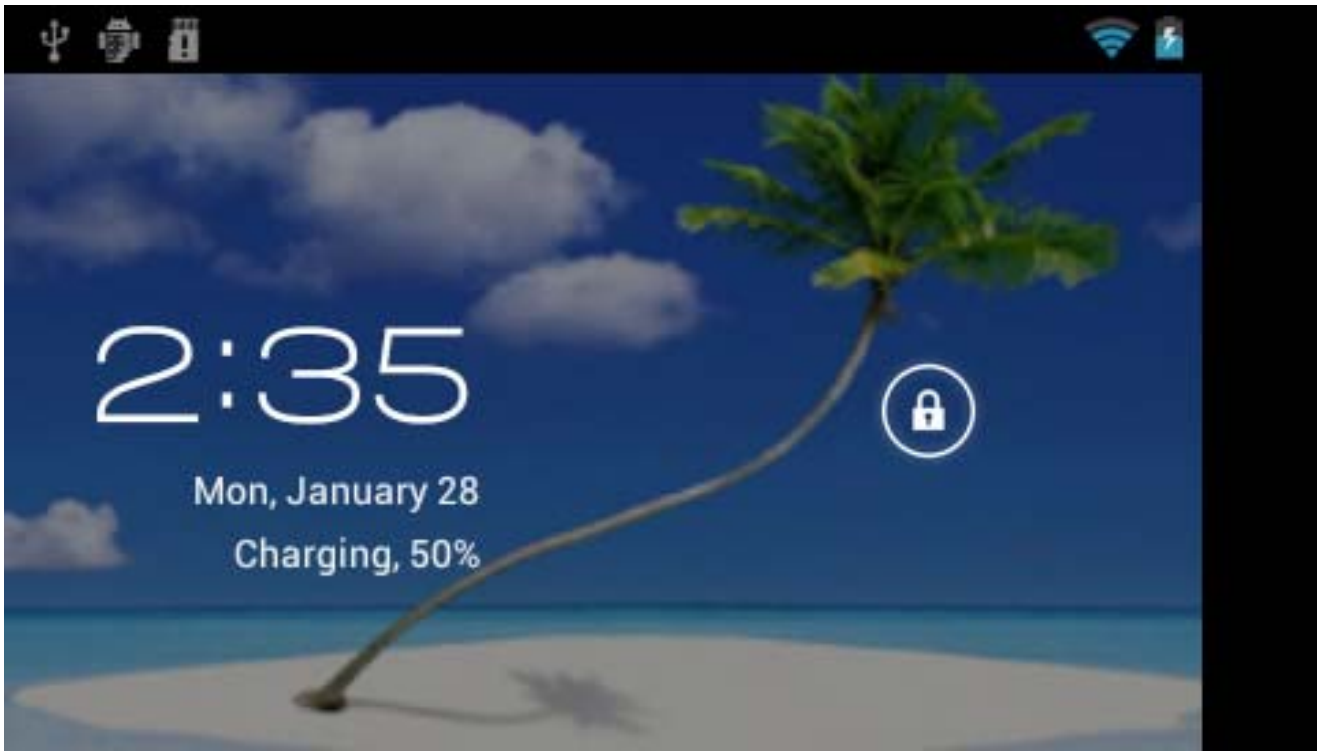

To power off the device, long press button for 3 seconds, the screen will show the power off options:
Cancel or OK. Tap “OK” to power off the unit or tap “Cancel” to exit to previous operation.

【Note】When the device is low battery, it will alert continuously and will shut down automatically when battery has completely run out. The device cannot be powered on if the battery is empty, please recharge the battery at least one minute before restart the device.

Standby and Lock screen

Press ⏻ button shortly to turn the device to standby mode. Under standby mode, the screen is blackout. Press ⏻ button shortly again to reactivate the device. The device will then turn to Lock screen while the primary operation of the device will continue.

Unlock the screen by sliding 🔒 to the up to resume to status before power saving.

【Note】The primary operation of the device under standby mode will pause and the primary operation of the device under Lock screen mode will continue, only the screen is locked.

The desktop status bar and shortcut menu and the definition of the icons

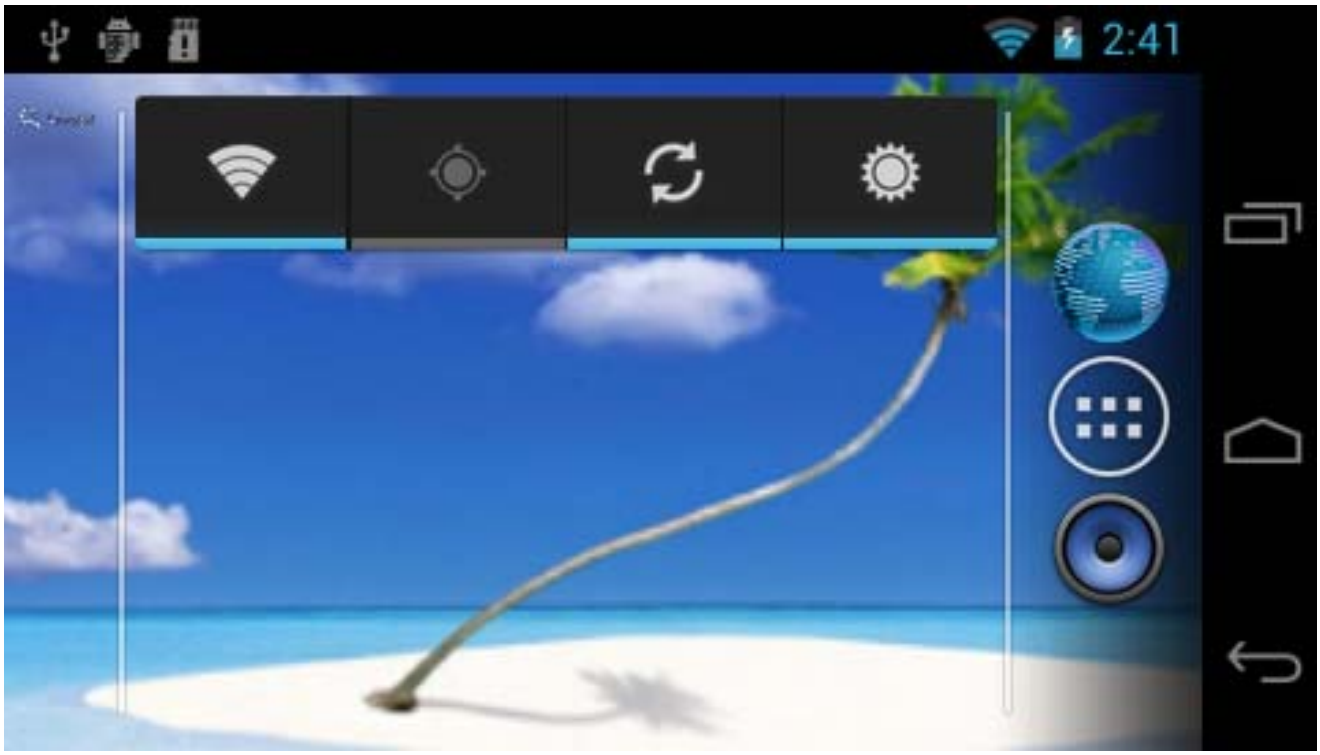

Icon	Function
	Back – Tap it to go to the previous screen
	Home page - Tap it to return to the desktop
	Tap it to check the latest files that you browsed
	Tap it to adjust the brightness
	The WIFI signal indicator appears only when the device is connected to a WIFI network.
	The USB icon appears only when the device is connected to a USB device successfully.

	The Android logo appears only when the device is connected to a computer.
	The micro SD card icon appears only when a micro SD is inserted into the device.
	The current system time
	The battery icon shows the remaining battery level or to indicate battery recharging status.
	Applications – Tap it go to Application menu

Orientation Sensor Setting

The device contains a sensor that will automatically change the orientation of screen by 90 degree as you rotate the tablet. The sensor works the best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).

The Orientation sensor can be activated or deactivated in the Setting menu: Setting → Display → Auto-rotate screen. Tick the box if you want to activate the sensor or un-tick the box to deactivate this function.

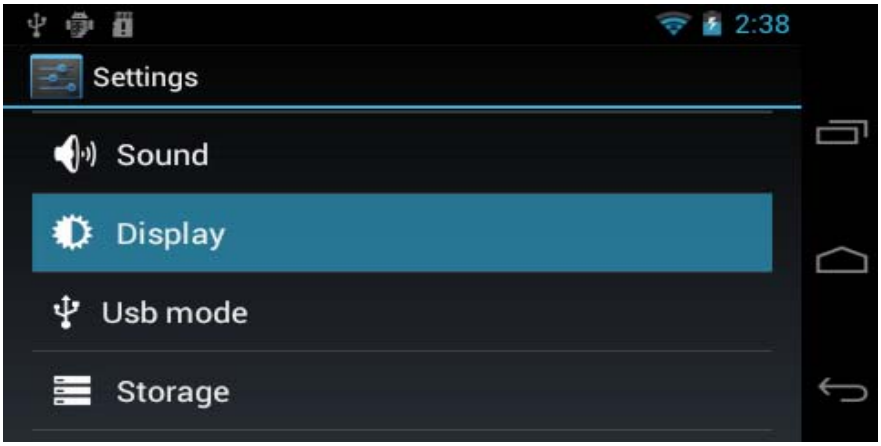

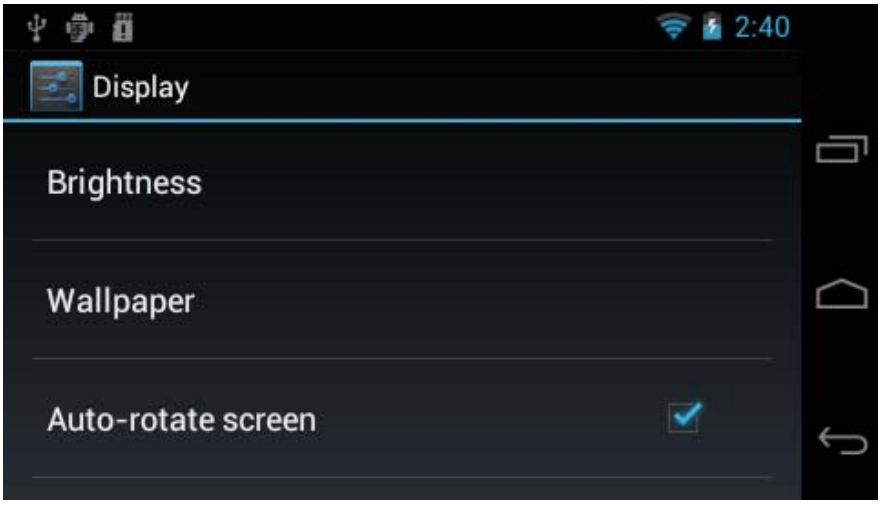

Battery management and recharging

a. Recharge the battery about 3 to 5 hours to make sure the battery is fully charged at the first time.

b. Plug in the adapter provided in the accessory pack to the USB slot located on the upper right side of the device and connect the adapter to a proper power socket. Once the power is connected, the battery recharging icon will appear on the status bar which indicating that the device is under recharging. When the power recharging icon will turn to blue entirely when the battery is fully recharged and you can disconnect the power charger from the device.

【Note】In order to keep the battery in the best condition, please pay attention to the below:

- Don't recharge the device under high temperature.
- Don't release the power of the battery, you can charge the battery when there is still power in the battery. It is not necessary to wait the battery to completely run out before recharging.
- To maintain the battery with a long life span, keep recharging the battery once every two weeks in the case if you don't use the device for a long time.

WIFI network settings

From desktop, Tap 

to enter setting menu and slide WI-FI function to ON and tap the desired WIFI network and enter the wireless network setting page.

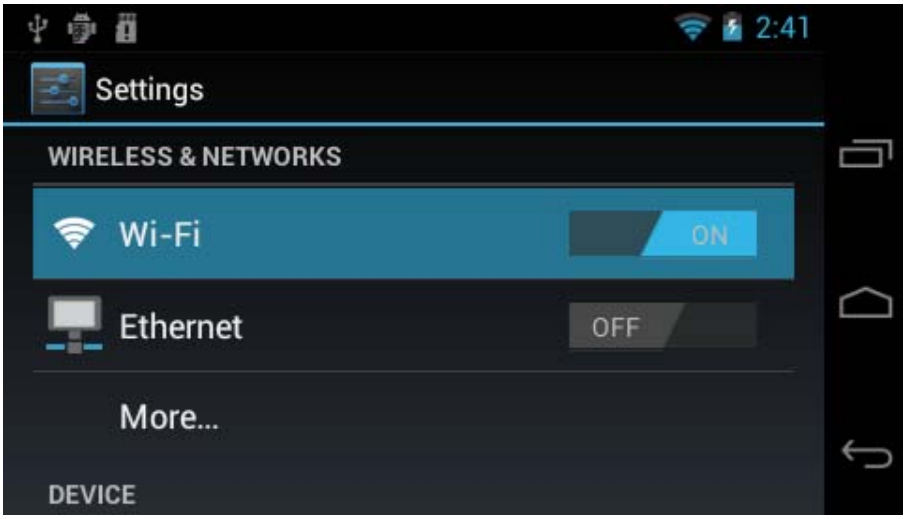

Enter the password and tap “Connect” or tap “Cancel” to exit to previous screen.

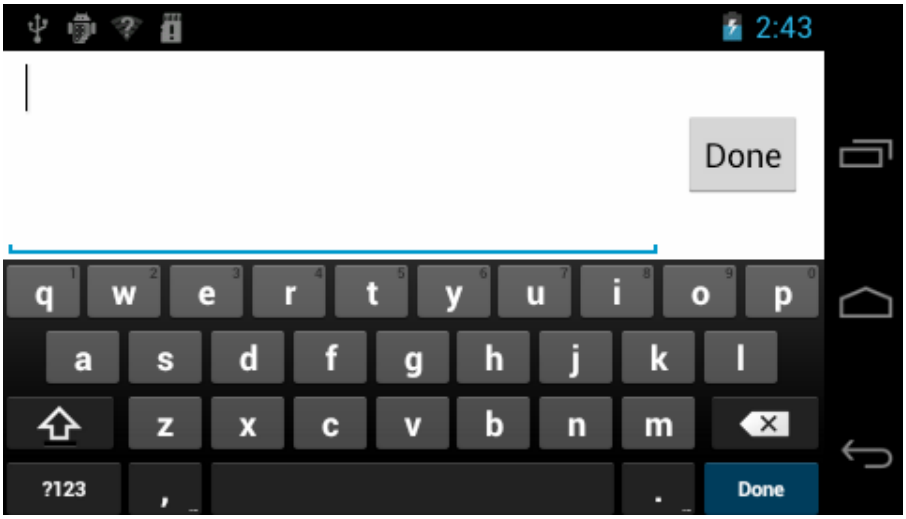

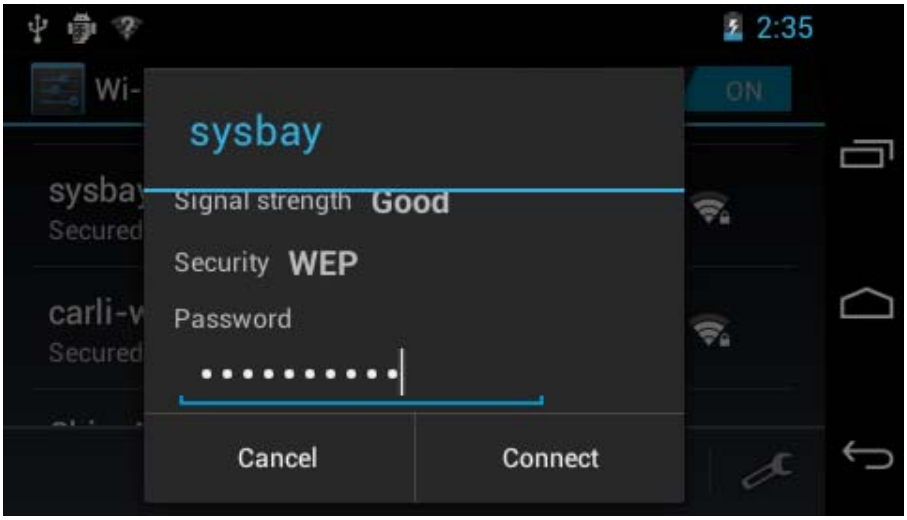

To install an APK file

This device supports third part Application Program .APK files.

From desktop, Tap to enter application menu and tap

to enter APK installer tool or;

Note: Some APK. can't be downloaded due to the CPU limitation.

From desktop, Tap to enter application menu and tap 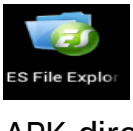

to enter a list of file and tap on the desire APK file to install the APK directly.

To uninstall an APK file

From desktop, Tap 

to enter setting menu and tap “Apps” to enter a list of installed application. Tap the desired APK file and tap “Uninstall” to confirm.

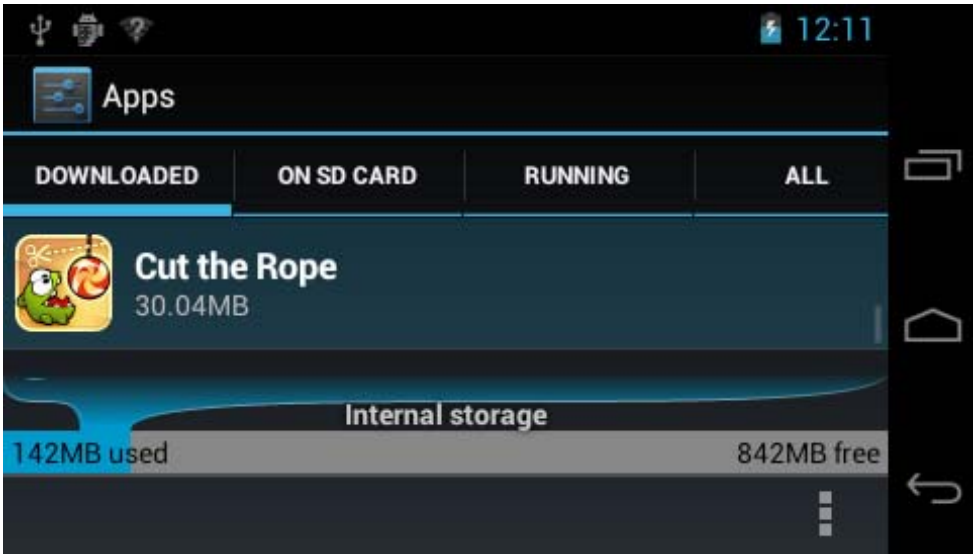

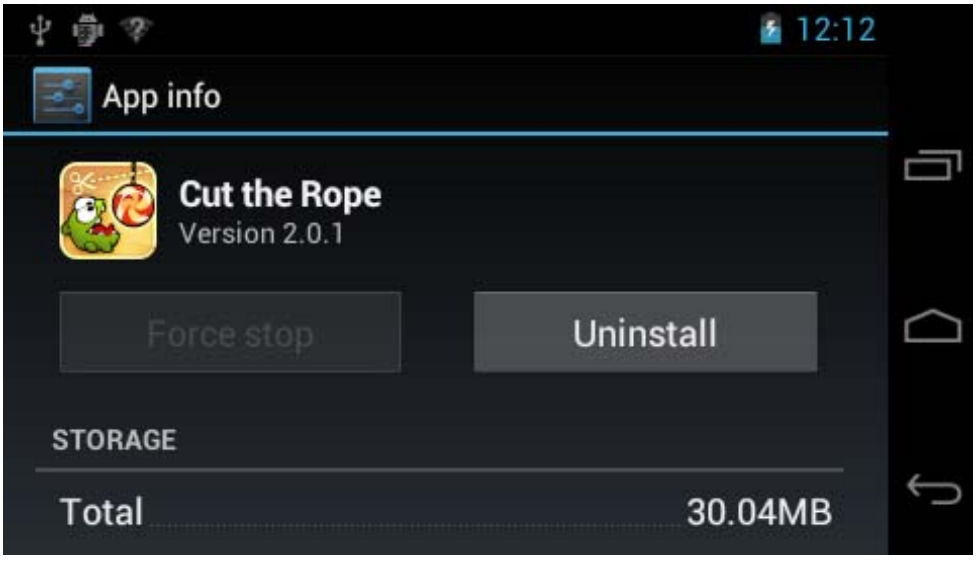

Camera

This device has a built-in 0.3MPIXEL front camera for photo, video and web cam.

From desktop, Tap to enter application menu and tap

to enter camera mode.

Tap to enter photo mode or tap to enter video mode.

Slide between and to zoom in and out.

Taking a photo:

In photo mode, tap to take a photo.

Tap to enter a sub-menu.

 - Camera settings: set store location, picture size,camera shutter and restore defaults

You can find the photo files from Application menu → File Manger → DCIM → Camera

Taking a video:

In video mode, tap to start the video recording and tap to stop.

Tap to enter a sub-menu.

- Camera settings: Set store location and restore defaults

You can find the video files from Application menu → File Manger → DCIM → Camera

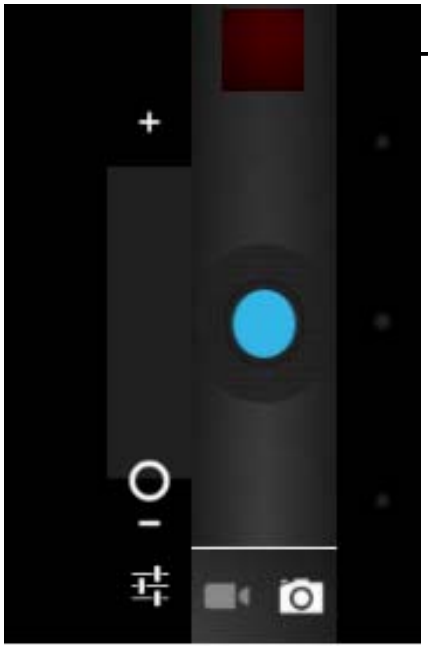

Here shows the preview of previous taken photo or video.

Voice Recording

This device has a built-in microphone for voice recording and web cam.

From desktop, Tap to enter application menu and tap

to enter voice recording mode.

Tap to start recording.
Tap to stop recording.
Tap to review the section just recorded.
To save the recording, tap “DONE” and exit to Application menu or;
Tap “Discard” to erase the recording and exit to Application menu
You can find the saved file from Application menu → File Manger.

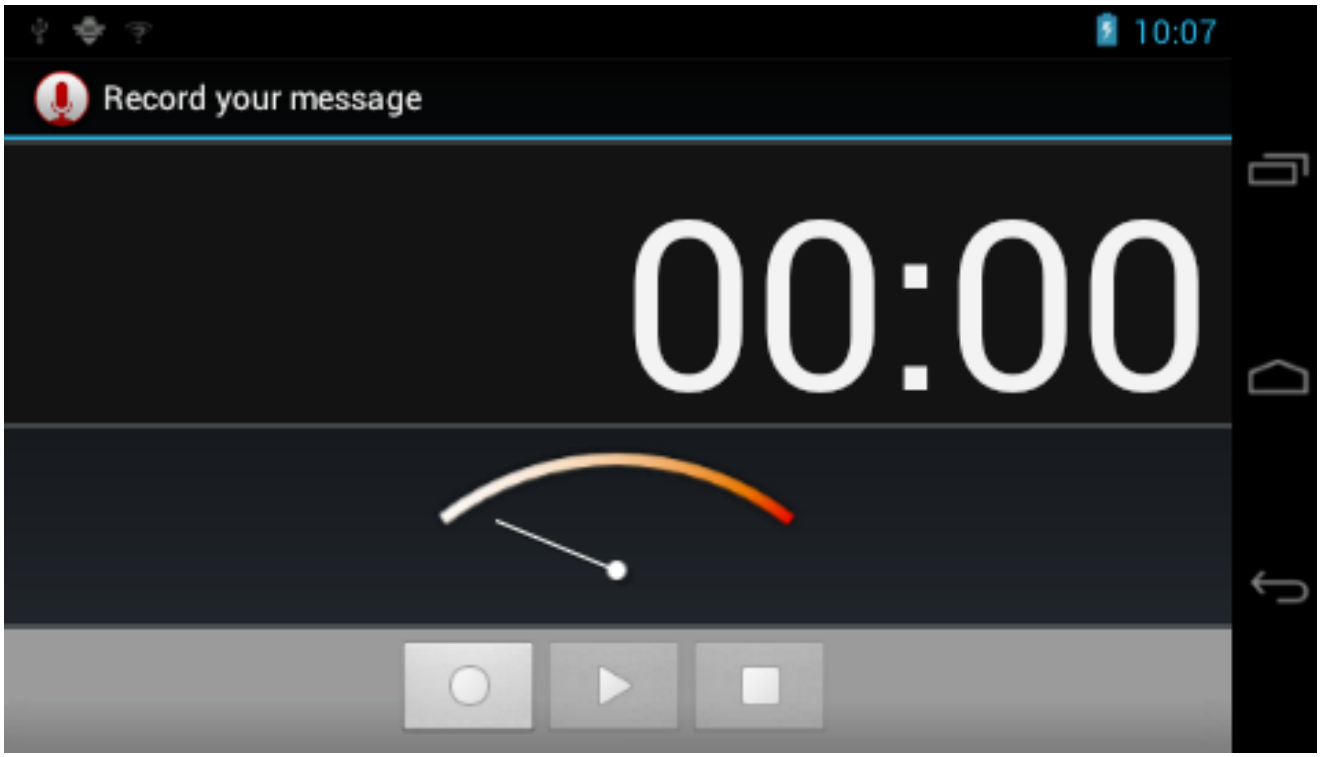

Use the device a multi media player

Audio playback:

From desktop, tap to enter Application menu. Tap

to enter audio playback mode.

Only music files stored in the device will be shown in the file list. You can classify the music file list by: ARTISTS, ALBUMS, SONGS, PLAYLISTS and NOW PLAYING by selecting the appropriate option.

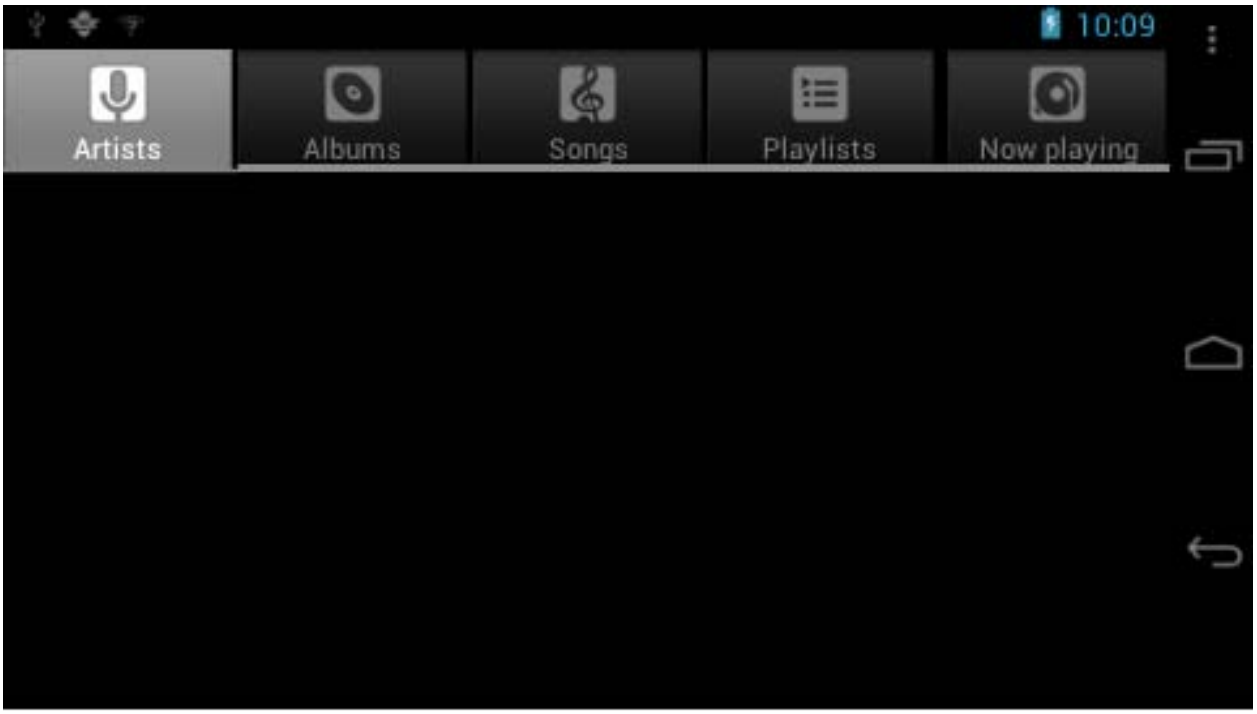

Tap a song to start playback. On playback interface, you can tap on the function bar to adjust the playback time, backward/previous, forward/next, play, pause, shuffle, repeat setting, etc.

Video playback:

From desktop, tap to enter Application menu. Tap 

to enter video / photo mode.

Only videos files, photo files stored in the device and videos/photos taken from the built-in camera will be shown in the file list.

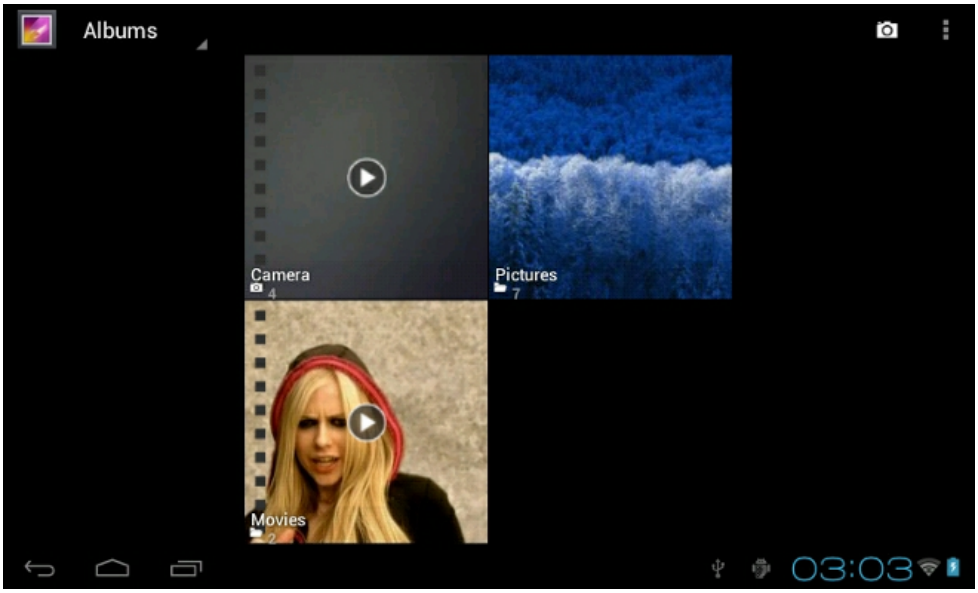

Tap on “MOVIES” to enter a list of preview videos. Tap any video file to enter the playback screen and tap on the play icon to start playback.

You can adjust the playback time by sliding the time bar, or adjust the volume by tapping .

Tap for previous, play, next.

Tap to go to the previous screen.

Tap to enter the sub-menu for subtitles.

Tap to choose repeat mode.Tap to change screen brightness.

Tap to enter screen ratio settings for the videos or movies.

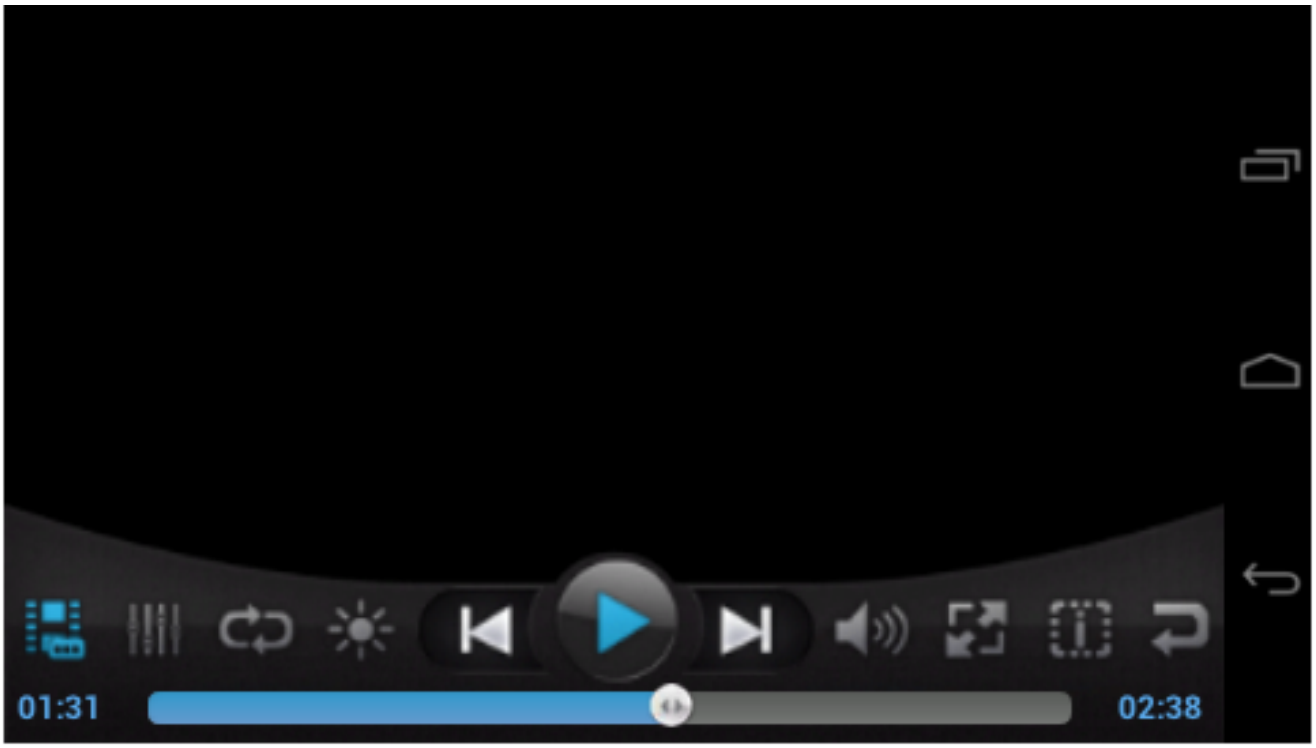

Photo browsing:

From desktop, tap to enter Application menu. Tap 

to enter video / photo mode.

Only videos files, photo files stored in the device and videos/photos taken from the built-in camera will be shown in the file list.

Tap on “PICTURES” to enter a thumbnail of photos.

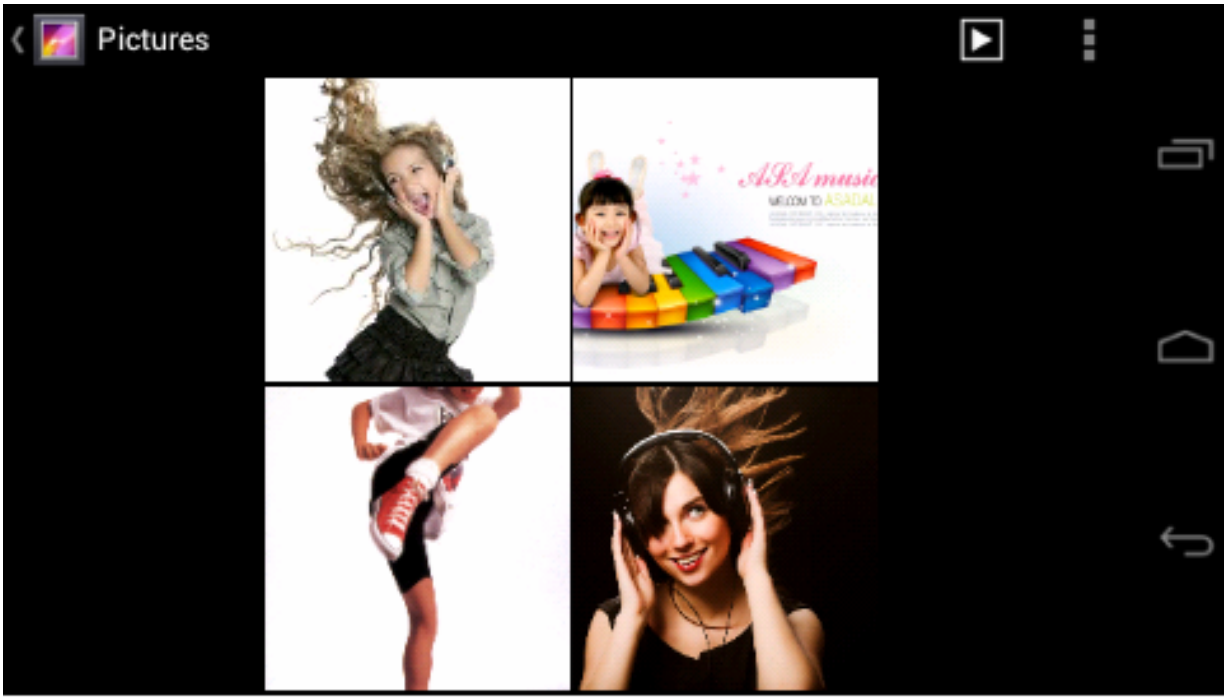

- Press on the thumbnail of a photo to access a full-sized version.
- Get a closer look at a photo by double tapping the screen. Two taps will magnify the image. Another two taps will return to the original view.
- A tap on the screen, a thumbnail of photos will appear and you can tap on any photo to move from one photo to another.
- Enlarge an image by touching the image with two fingers and spreading them toward the edges of the screen. Pinch the image back to original size by bringing your index finger and thumb together.
- See an image in widescreen perspective by turning the device on its side. The device automatically rotates a photo as you move the device and spreads the edges to comply with the view screen's orientation (this function is only valid after Auto-rotate screen is activated from Setting → Display → Auto-rotate screen).

ES File Explorer

From desktop, Tap to enter application menu and tap

to view a list of files in the device.

to enter main menu

turn to previous menu

to enter into sub-menu

to choose two or more files

You can also delete, rename, copy, move a file by pressing on the file for 1 second or tap

, a pop up menu will appears:

Set OSD Language

You can set the display language of the device from the list of available language provided in the device.

Go to desktop → Setting → Language & Input → Language & input

Tap on “Language” to enter a list of OSD language options and tap on the desired language and it will be set instantly.

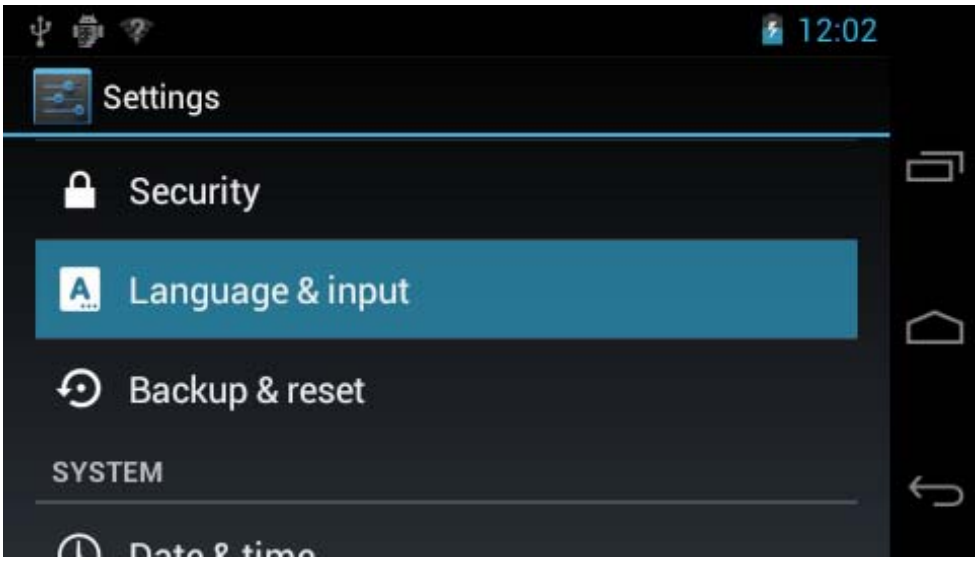
12:02
Settings
Security
Language & input
Backup & reset
SYSTEM

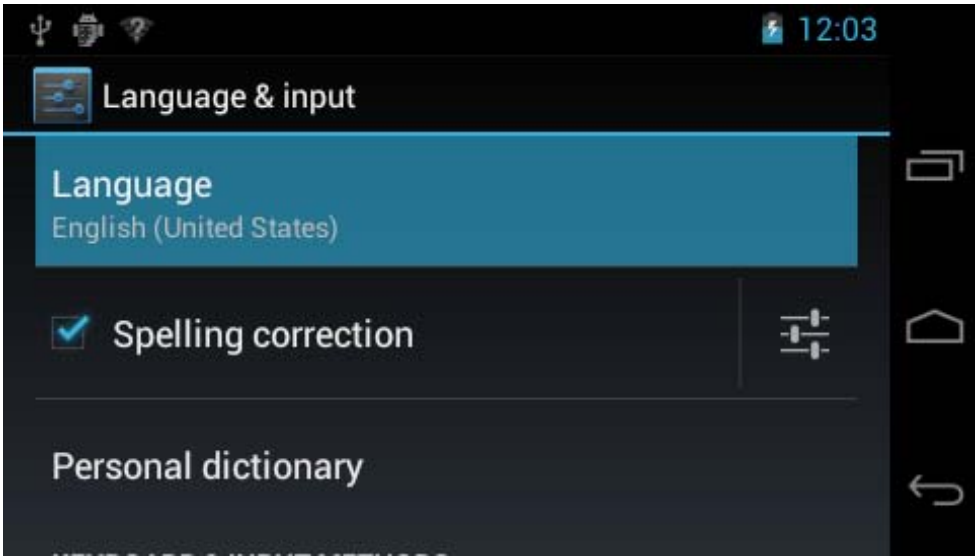
12:03
Language & input
Language
English (United States)
Spelling correction
Personal dictionary

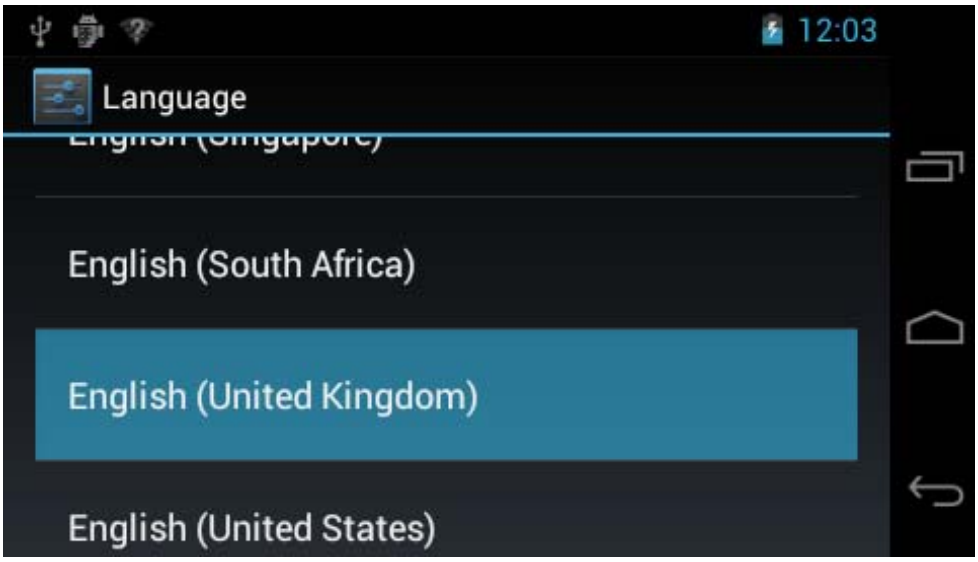
12:03
Language
English (South Africa)
English (United Kingdom)
English (United States)

Set Keyboard

You can select a keyboard input method from Setting.
Go to desktop → Setting → Language & Input → Language & input
Select from the list of Keyboard & Input methods.

Any keyboard input method APKS installed in the device can be also find from this list of Keyboard & Input methods.

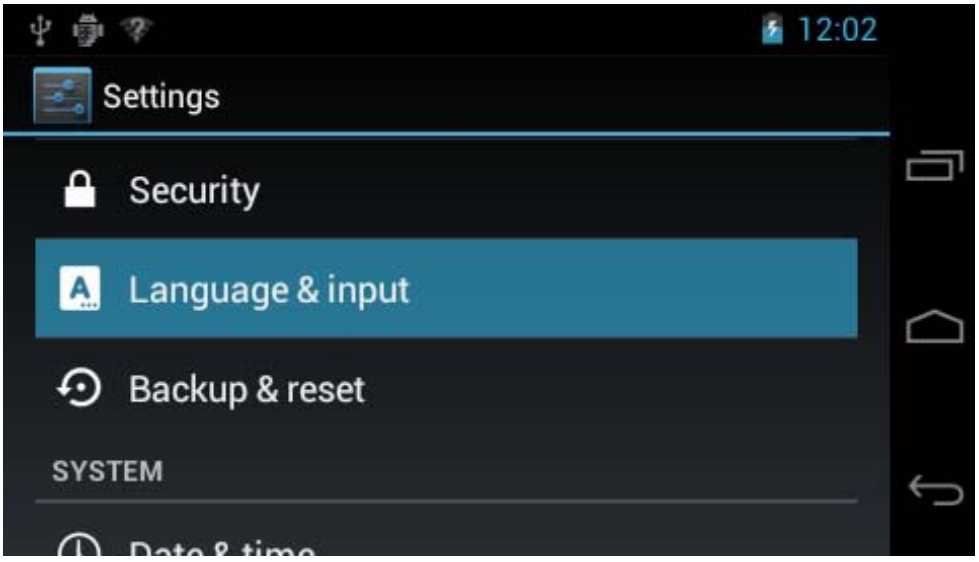

Tap on to enter Android keyboard settings menu:

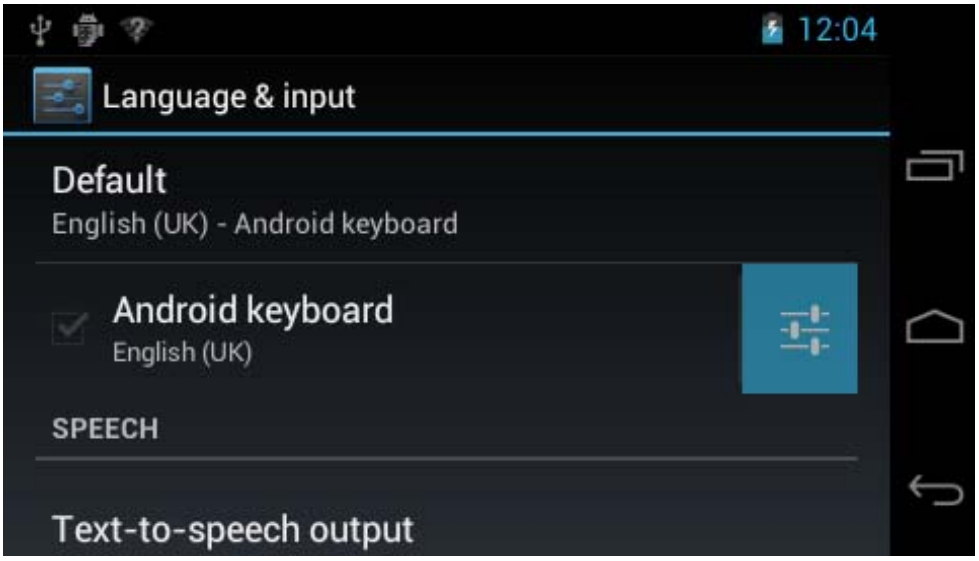

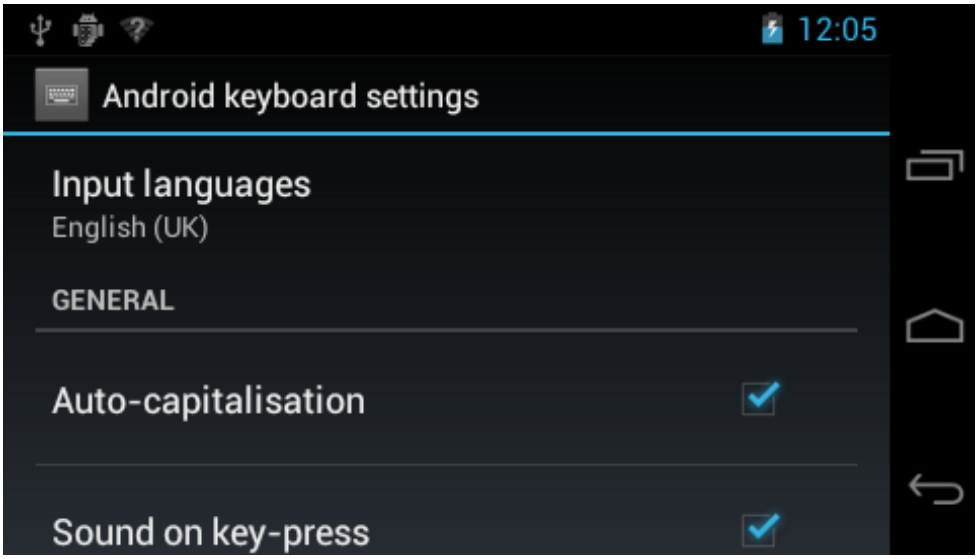

From the Android keyboard settings menu, you can setup:

- Auto-capitalization
- Sound on key-press
- Show settings key
- Auto correction
- Show correction suggestions
- Advance settings for the above features

Set Date and Time

You can set system date and time from Setting.

Go to desktop → Setting → Date & time

You can setup Automatic date & time, Automatic time zone, Set date, Set time, Select time zone, Use 24-hour format, and Select date format.

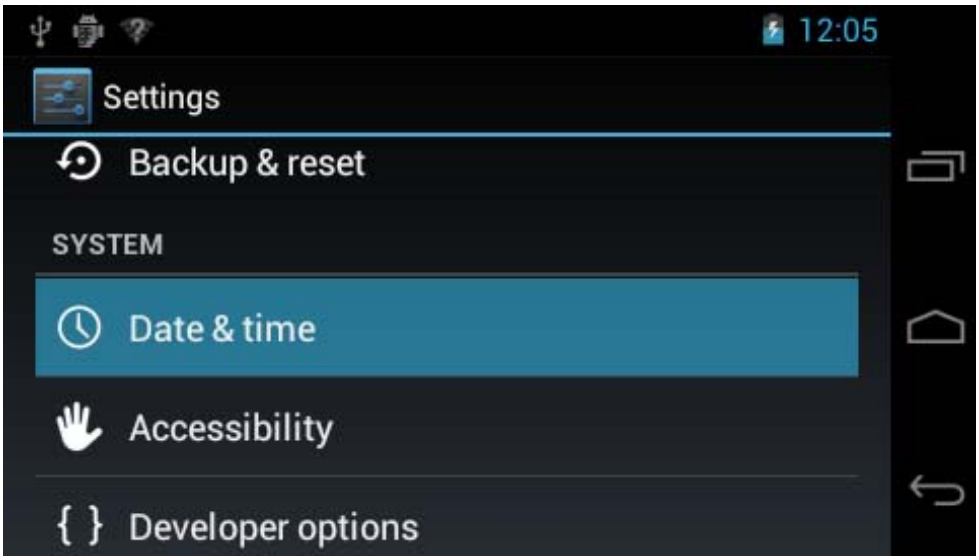
12:05
Settings
Backup & reset
SYSTEM
Date & time
Accessibility
{ } Developer options

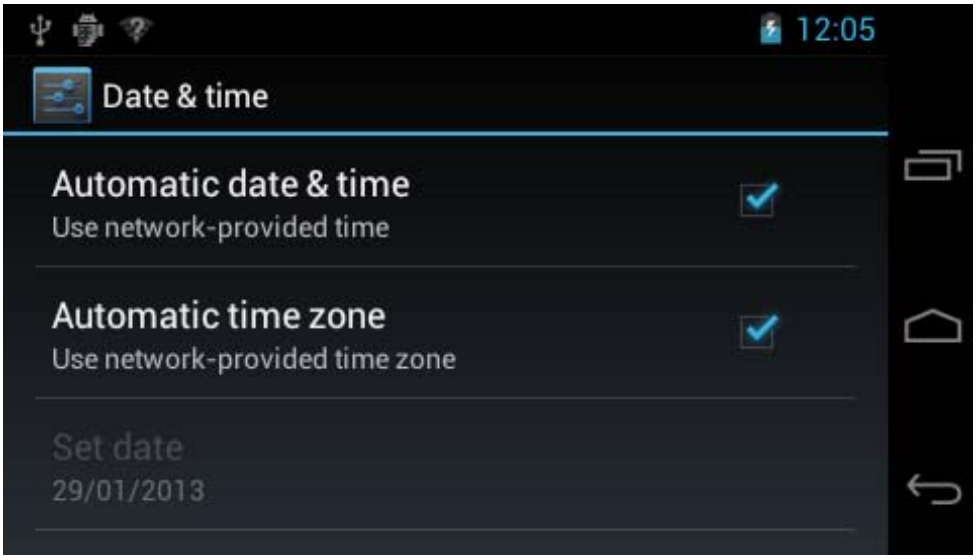
12:05
Date & time
Automatic date & time
Use network-provided time
Automatic time zone
Use network-provided time zone
Set date
29/01/2013

About the Device

You can get a quick view on the device status such as firmware version, battery consumption status, battery level, model no., Android OS version, Network, Signal strength, etc from:

Setting → About tablet

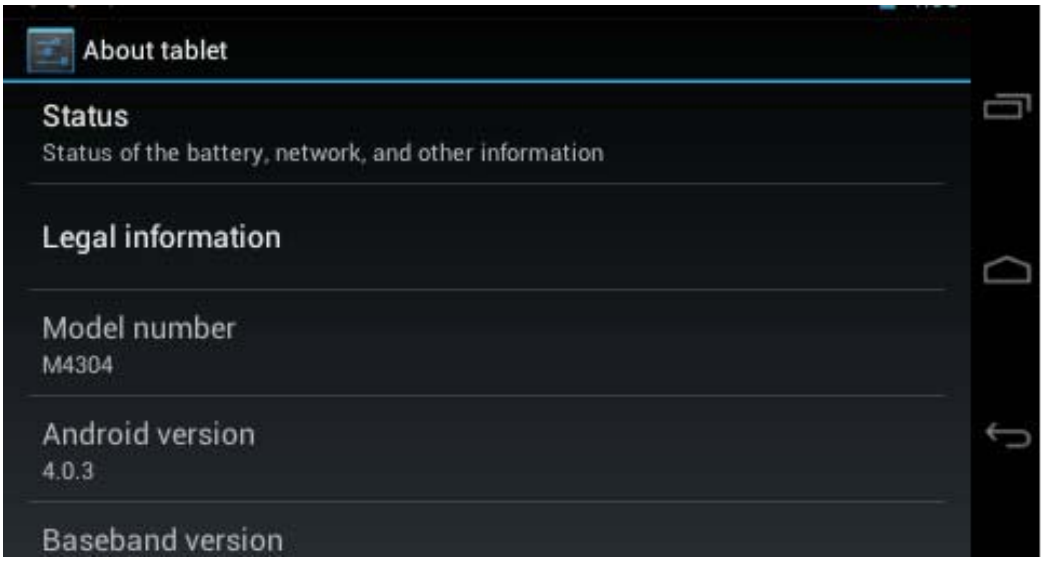

Troubleshooting

Can not turn on the device?

- You may not be able to turn on the device when the battery is below the critical level. Recharge the battery for a few minutes and try to turn it on again.

- Check if the power charger is connected properly and firmly.

The battery working time is too short?

- The duration of the lithium battery varies with environmental temperature changes and the service conditions. If the environment temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature.

- Battery consumption varies depending on if the brightness and on time of the screen, the volume level of the loudspeaker as well as the operation status of the central processor (CPU). To save battery, please refer to Power saving mode section of this menu.

No sound from earphone?

- Check if the volume setting is adjusted to 0.

- Check whether the audio file is damaged and try to play other audio files to confirm. In the case if the audio file is damaged, it may cause severe noise or staccato.

Can not copy files?

- Check if the device is connected to the computer properly.

- Check if the USB cable is working.

- Check whether the memory capacity available is enough for storage of the copying files.

The device is dead?

- Please try to reset the device by following procedure: Long press the Power on/off button until the player power off, then you can turn on the player again.

Proscan is a registered trademark of TECHNICOLOR USA INC. Used under license.

Specifications are subject to change without prior notice.
No part of this document may be reproduced or transmitted in any form or by any mean including photocopying and recording or translating to another languages for any purposes without the prior written consent of the manufacturer.
All brand names, logos and registered trademarks mentioned are property of their respective owners.
All rights reserved.